




REVOLUTION 26 HANDLE ASSEMBLY PROCEDURE

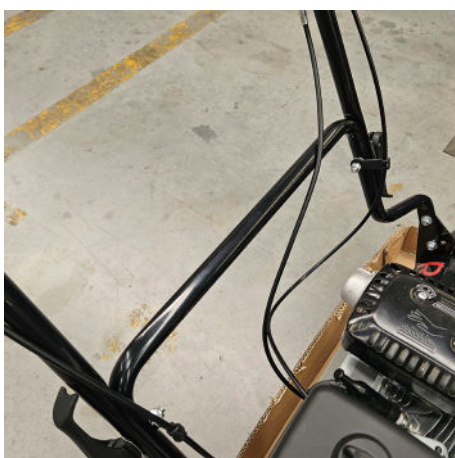

1. Open the box and remove all the packaging, but leave the mower on the pallet. Fit the lower handle using the screws and nuts provided. Fit the upper handle to the lower handle with the levers pointing upwards, as shown above. Make sure to fit the cable guides. Cable "A" on the Right and "C" on the Left.

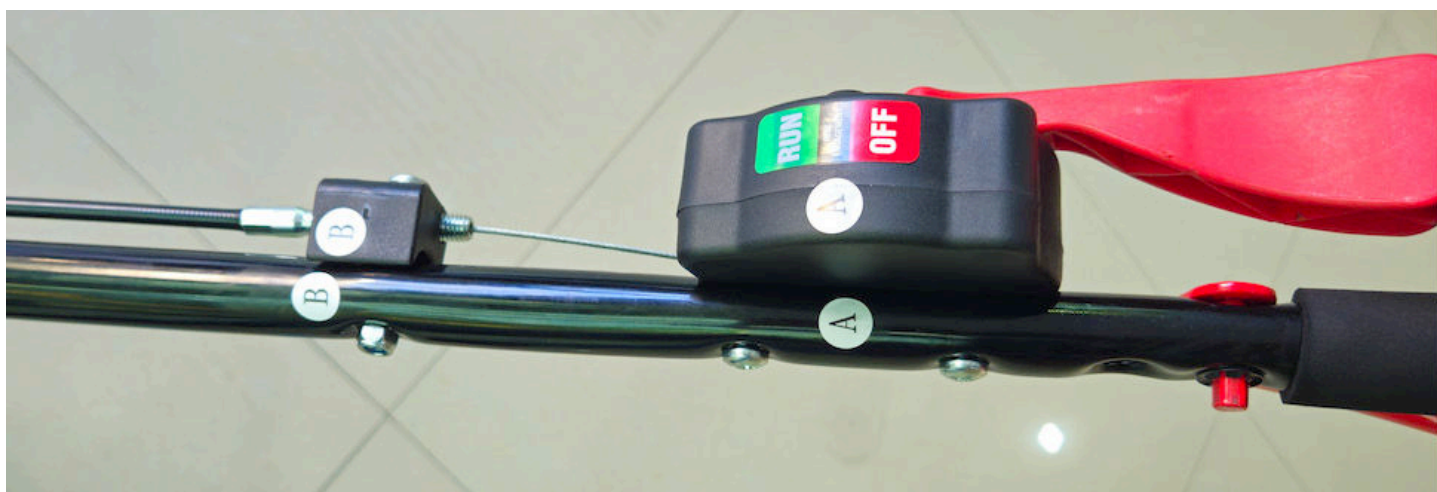


2. Using the screws supplied, fasten the reel clutch lever "A" and cable thumb wheel "B" on the Outer Right hand side of the handle as shown.

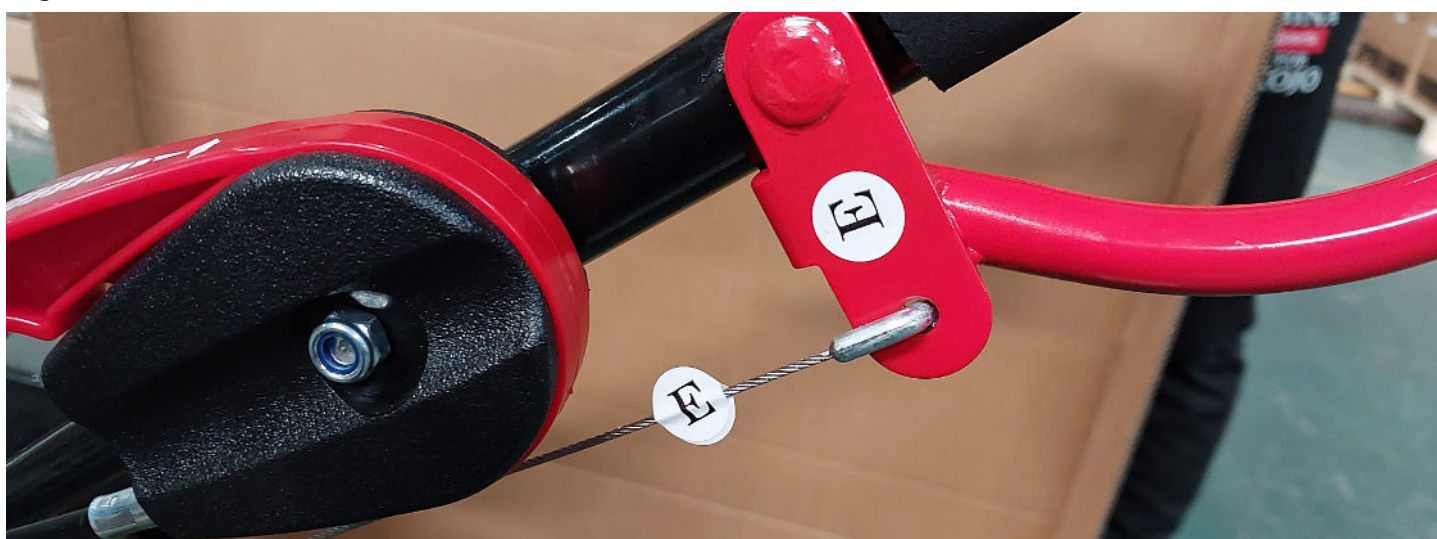

3. Hook the Z-bend "E" through the bail arm as shown




4. Using the screws supplied, loosen the tape and fasten the throttle lever “C” and cable thumb wheel “D” on the Outer Left hand side of the handle as shown.

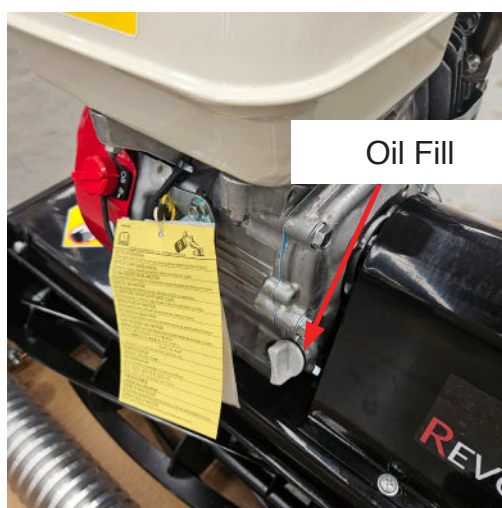

Oil Fill

5. Fill the engine with oil as instructed in the engine manual.

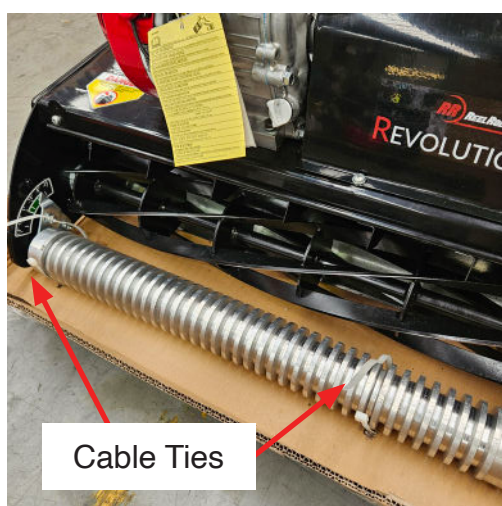

Cable Ties

6. Loosen or cut the ties holding the front roller to the pallet. Carefully push the mower off the pallet.